

# 60°/60°F

# HYDROMETER

*instructions*

3-0011



 LaMotte



## 60°/60°F Hydrometer

Salinity is the concentration of dissolved salts in water, usually expressed in “parts per thousand” (ppt or 0/00) units (parts of salts per 1000 parts of water). Freshwater contains few salts; drinking water usually has a salinity of less than 0.5 ppt. Seawater salinity averages 35 ppt.

The tables that are widely used to convert hydrometer readings (specific gravity) at any temperature to density at 15°C were designed to be used with a hydrometer calibrated on a 15°C/4°C basis.

Most hydrometers used for salinity measurements are calibrated on a 60°/60°F basis. The calibration basis for a hydrometer is printed on the paper scale inside each hydrometer.

If a 60°/60°F hydrometer is used with conversion tables designed for 15°C/4°C hydrometer, a value is obtained which is 0.001 higher than it should be. When converted to salinity, this error produces a salinity reading that averages 1.3 parts per thousand (ppt) higher than it should be.

The tables included in this manual are designed to be used with a hydrometer calibrated on a 60°/60°F basis. Check the hydrometer you are using and be sure to use the correct conversion table for that type of hydrometer.

Salinity may be calculated by measuring the actual specific gravity (Sp Gr) with a 60°/60°F hydrometer and temperature of the water simultaneously, then finding the corresponding salinity on Table 1.




**WARNING:** contains LEAD. A product in this kit contains a LEAD (Pb) weight. Weights should not be handled by children under 14 without adult supervision.

## Procedure

---

1. Fill a hydrometer jar (3-0024) about  $\frac{3}{4}$  full with water to be tested.
2. Hang the thermometer (3-1066) in the jar so that it is totally submerged.  
**NOTE:** Make sure that the thermometer does not interfere with the hydrometer—the hydrometer must float freely.
3. Lower the hydrometer (3-0011) carefully into the jar. Allow it to float freely in the jar. Avoid splashing drops onto hydrometer stem above water level.
4. Viewing the thermometer through the clear jar, read and record the temperature.
5. Read the specific gravity from the scale in the hydrometer stem at the point where the scale crosses the surface of the water sample in the jar. Note that the water seems to creep up the glass stem of the hydrometer. The correct reading is obtained at the water level, not at the higher point called the meniscus. See Diagram 1.

**Diagram 1**  
**Correctly Reading The Hydrometer**

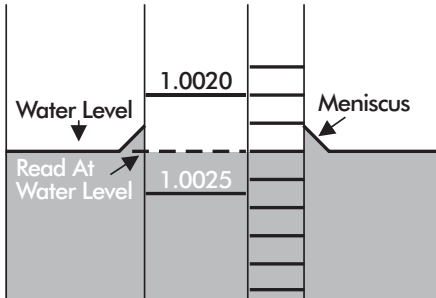

**NOTE:** Be sure your eye is even with the water level in the hydrometer jar. Viewing down or up at an angle can give an incorrect reading.


- The specific gravity may be read to the fourth decimal place using the lines printed between the labeled graduations. Use the illustration in diagram 2 to help identify the values on the scale.
- Use Table 1 to convert the hydrometer reading and temperature to SALINITY in parts per thousand (ppt).

**Example:**

The observed hydrometer specific gravity (S.G.) reading is 1.0110 and water temperature in the hydrometer jar is 25°C.

Using Table 1, locate the observed reading of 1.0110 in the left-hand column. Move across the chart row horizontally to the 25° column. The number found, 16.9, is the SALINITY in parts per thousand (ppt).

**Diagram 2**  
**Reading The Hydrometer Specific Gravity Scale**

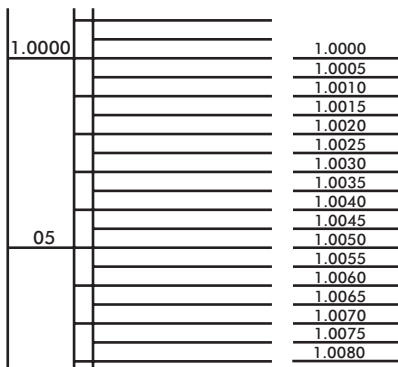

**Table 1 • Salinity in parts per thousand (ppt)***Note: For use with 60°/60°F hydrometer*

Observed Reading (SpGr)	Temperature of Water (°C)									
	-1.0	0.0	1.0	2.0	3.0	4.0	5.0	6.0	7.0	8.0
1.0000										
1.0010	0.6	0.6	0.5	0.5	0.2	0.2	0.2	0.2	0.2	0.2
1.0020	1.9	1.9	1.8	1.6	1.6	1.6	1.5	1.5	1.6	1.6
1.0030	3.2	3.1	2.9	2.9	2.8	2.8	2.8	2.8	2.8	2.9
1.0040	4.4	4.2	4.2	4.1	4.1	4.1	4.1	4.1	4.1	4.2
1.0050	5.7	5.5	5.4	5.4	5.4	5.3	5.3	5.4	5.4	5.4
1.0060	6.8	6.8	6.7	6.6	6.6	6.6	6.6	6.6	6.7	6.7
1.0070	8.1	8.0	7.9	7.9	7.9	7.9	7.9	7.9	7.9	8.0
1.0080	9.3	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.3
1.0090	10.5	10.5	10.4	10.4	10.4	10.4	10.4	10.5	10.5	10.6
1.0100	11.8	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.8	11.8
1.0110	13.0	13.0	12.8	12.8	12.8	12.8	13.0	13.0	13.0	13.1
1.0120	14.3	14.1	14.1	14.1	14.1	14.1	14.1	14.3	14.3	14.4
1.0130	15.4	15.4	15.4	15.4	15.4	15.4	15.4	15.4	15.6	15.7
1.0140	16.7	16.6	16.6	16.6	16.6	16.6	16.7	16.7	16.9	17.0
1.0150	17.9	17.9	17.9	17.9	17.9	17.9	17.9	18.0	18.0	18.2
1.0160	19.2	19.1	19.1	19.1	19.1	19.2	19.2	19.3	19.3	19.5
1.0170	20.4	20.4	20.4	20.4	20.4	20.4	20.5	20.5	20.6	20.8
1.0180	21.7	21.7	21.6	21.6	21.7	21.7	21.7	21.8	22.0	22.1
1.0190	22.9	22.9	22.9	22.9	22.9	23.0	23.0	23.1	23.3	23.4
1.0200	24.2	24.2	24.0	24.2	24.2	24.2	24.3	24.3	24.4	24.6
1.0210	25.3	25.3	25.3	25.3	25.5	25.5	25.6	25.6	25.7	25.9
1.0220	26.6	26.6	26.6	26.6	26.6	26.8	26.8	26.9	27.0	27.2
1.0230	27.8	27.8	27.8	27.8	27.9	27.9	28.1	28.2	28.3	28.5
1.0240	29.1	29.1	29.1	29.1	29.1	29.4	29.4	29.5	29.5	29.8
1.0250	30.3	30.3	30.3	30.4	30.4	30.6	30.6	30.7	30.8	30.9
1.0260	31.6	31.6	31.6	31.6	31.7	31.7	31.9	32.0	32.1	32.2
1.0270	32.8	32.8	32.9	32.9	32.9	33.0	33.2	33.3	33.4	33.5
1.0280	34.1	34.1	34.1	34.1	34.2	34.5	34.5	34.5	34.7	34.8
1.0290	35.2	35.2	35.4	35.4	35.5	35.6	35.6	35.8	35.9	36.2
1.0300	36.5	36.5	36.5	36.7	36.7	36.9	36.9	37.1	37.2	37.3
1.0310	37.7	37.7	37.8	37.8	38.0	38.1	38.2	38.4	38.5	38.6

**Table 1 • Salinity in parts per thousand (ppt)***Note: For use with 60°/60°F hydrometer*

Observed Reading (Sp Gr)	Temperature of Water (°C)									
	9.0	10.0	11.0	12.0	13.0	14.0	15.0	16.0	17.0	18.0
1.0000								0.0	0.2	0.3
1.0010	0.5	0.5	0.6	0.6	0.7	0.8	1.0	1.2	1.5	1.6
1.0020	1.6	1.8	1.9	2.0	2.1	2.3	2.4	2.5	2.8	2.9
1.0030	2.9	3.1	3.2	3.3	3.4	3.6	3.7	3.8	4.1	4.2
1.0040	4.2	4.4	4.5	4.6	4.8	4.9	5.0	5.1	5.4	5.5
1.0050	5.5	5.5	5.7	5.8	5.9	6.2	6.3	6.6	6.7	7.0
1.0060	6.8	6.8	7.0	7.1	7.2	7.5	7.6	7.9	8.0	8.3
1.0070	8.1	8.1	8.3	8.4	8.5	8.8	8.9	9.2	9.3	9.6
1.0080	9.3	9.4	9.6	9.7	9.8	10.0	10.2	10.5	10.6	10.9
1.0090	10.6	10.7	10.9	11.0	11.1	11.3	11.5	11.8	11.9	12.2
1.0100	11.9	12.0	12.2	12.3	12.4	12.6	12.8	13.1	13.2	13.5
1.0110	13.2	13.4	13.5	13.6	13.7	13.9	14.1	14.4	14.5	14.8
1.0120	14.5	14.7	14.8	14.9	15.0	15.2	15.4	15.7	15.8	16.1
1.0130	15.8	15.8	16.0	16.2	16.3	16.5	16.7	17.0	17.1	17.4
1.0140	17.0	17.1	17.3	17.5	17.7	17.8	18.0	18.3	18.6	18.7
1.0150	18.3	18.4	18.6	18.8	19.0	19.1	19.3	19.6	19.9	20.0
1.0160	19.6	19.7	19.9	20.1	20.3	20.4	20.6	20.9	21.2	21.3
1.0170	20.9	21.0	21.2	21.3	21.6	21.7	22.0	22.2	22.5	22.7
1.0180	22.2	22.3	22.5	22.6	22.9	23.0	23.3	23.5	23.8	24.0
1.0190	23.5	23.6	23.8	23.9	24.2	24.3	24.6	24.8	25.1	25.3
1.0200	24.7	24.8	25.1	25.2	25.5	25.6	25.9	26.1	26.4	26.6
1.0210	26.0	26.1	26.4	26.5	26.8	26.9	27.2	27.4	27.7	27.9
1.0220	27.3	27.4	27.7	27.8	28.1	28.2	28.5	28.7	29.0	29.2
1.0230	28.6	28.7	28.9	29.1	29.4	29.5	29.8	30.0	30.3	30.6
1.0240	29.9	30.0	30.2	30.4	30.6	30.8	31.1	31.3	31.6	31.9
1.0250	31.1	31.3	31.5	31.7	31.9	32.1	32.4	32.6	32.9	33.2
1.0260	32.4	32.6	32.8	33.0	33.2	33.4	33.7	33.9	34.2	34.5
1.0270	33.7	33.9	34.1	34.3	34.5	34.7	35.0	35.2	35.5	35.8
1.0280	35.0	35.1	35.4	35.6	35.8	36.0	36.3	36.5	36.8	37.1
1.0290	36.3	36.4	36.7	36.8	37.1	37.3	37.6	37.8	38.1	38.4
1.0300	37.6	37.7	38.0	38.1	38.4	38.6	38.9	39.1	39.4	39.7
1.0310	38.9	39.0	39.3	39.4	39.7	39.9	40.2	40.5	40.7	41.0

**Table 1 • Salinity in parts per thousand (ppt)***Note: For use with 60°/60°F hydrometer*

Observed Reading (Sp Gr)	Temperature of Water (°C)									
	18.5	19.0	19.5	20.0	20.5	21.0	21.5	22.0	22.5	23.0
0.9990							0.0	0.1	0.2	0.3
1.0000	0.5	0.6	0.7	0.8	1.0	1.1	1.2	1.4	1.5	1.6
1.0010	1.8	1.9	2.0	2.1	2.3	2.4	2.5	2.5	2.7	2.8
1.0020	3.1	3.2	3.3	3.4	3.6	3.7	3.8	4.0	4.1	4.2
1.0030	4.4	4.5	4.6	4.8	4.9	5.0	5.1	5.3	5.4	5.5
1.0040	5.7	5.8	5.9	6.1	6.2	6.3	6.4	6.6	6.7	7.0
1.0050	7.1	7.1	7.2	7.4	7.5	7.6	7.7	7.9	8.1	8.3
1.0060	8.4	8.5	8.7	8.8	8.9	9.1	9.2	9.3	9.4	9.6
1.0070	9.7	9.8	10.0	10.1	10.2	10.4	10.5	10.6	10.7	10.9
1.0080	11.0	11.1	11.3	11.4	11.5	11.7	11.8	11.9	12.0	12.2
1.0090	12.3	12.4	12.6	12.7	12.8	13.0	13.1	13.2	13.4	13.6
1.0100	13.6	13.7	13.9	14.0	14.1	14.3	14.4	14.5	14.8	14.9
1.0110	14.9	15.0	15.2	15.3	15.4	15.6	15.7	16.0	16.1	16.2
1.0120	16.2	16.3	16.5	16.6	16.7	17.0	17.1	17.3	17.4	17.5
1.0130	17.5	17.7	17.8	17.9	18.0	18.3	18.4	18.6	18.7	18.8
1.0140	18.8	19.0	19.1	19.3	19.5	19.6	19.7	19.9	20.0	20.1
1.0150	20.1	20.4	20.5	20.6	20.8	20.9	21.0	21.2	21.3	21.6
1.0160	21.4	21.7	21.8	22.0	22.1	22.2	22.3	22.5	22.7	22.9
1.0170	22.9	23.0	23.1	23.3	23.4	23.5	23.6	23.8	24.0	24.2
1.0180	24.2	24.3	24.4	24.6	24.7	24.8	24.9	25.2	25.3	25.5
1.0190	25.5	25.6	25.7	25.9	26.0	26.1	26.4	26.5	26.6	26.8
1.0200	26.8	26.9	27.0	27.2	27.3	27.4	27.7	27.8	27.9	28.2
1.0210	28.1	28.2	28.3	28.5	28.6	28.9	29.0	29.1	29.2	29.5
1.0220	29.4	29.5	29.6	29.8	30.0	30.2	30.3	30.4	30.7	30.8
1.0230	30.7	30.8	30.9	31.2	31.3	31.5	31.6	31.7	32.0	32.1
1.0240	32.0	32.1	32.2	32.5	32.6	32.8	32.9	33.2	33.3	33.4
1.0250	33.3	33.4	33.7	33.8	33.9	34.1	34.2	34.5	34.6	34.7
1.0260	34.6	34.7	35.0	35.1	35.2	35.4	35.6	35.8	35.9	36.0
1.0270	35.9	36.2	36.3	36.4	36.5	36.7	36.9	37.1	37.2	37.5
1.0280	37.2	37.5	37.6	37.7	37.8	38.1	38.2	38.4	38.5	38.8
1.0290	38.6	38.8	38.9	39.0	39.1	39.4	39.5	39.7	39.9	40.1
1.0300	39.9	40.1	40.2	40.3	40.6	40.7	40.8	41.0	41.2	41.4
1.0310	41.2	41.4	41.5	41.8	41.9	42.0	42.1	42.3	42.5	



**Table 1 • Salinity in parts per thousand (ppt)***Note: For use with 60°/60°F hydrometer*

Observed Reading (Sp Gr)	Temperature of Water (°C)									
	23.5	24.0	24.5	25.0	25.5	26.0	26.5	27.0	27.5	28.0
0.9980							0.1	0.2	0.3	0.6
0.9990	0.5	0.6	0.7	0.8	1.0	1.2	1.4	1.5	1.8	1.9
1.0000	1.8	1.9	2.0	2.1	2.4	2.5	2.7	2.9	3.1	3.2
1.0010	2.9	3.1	3.2	3.4	3.6	3.8	4.0	4.2	4.4	4.5
1.0020	4.4	4.6	4.8	4.9	5.0	5.1	5.4	5.5	5.7	5.9
1.0030	5.8	5.9	6.1	6.2	6.3	6.6	6.7	6.8	7.1	7.2
1.0040	7.1	7.2	7.4	7.5	7.7	7.9	8.0	8.3	8.4	8.5
1.0050	8.4	8.5	8.7	8.9	9.1	9.2	9.3	9.6	9.7	10.0
1.0060	9.7	9.8	10.1	10.2	10.4	10.5	10.7	10.9	11.0	11.3
1.0070	11.0	11.3	11.4	11.5	11.7	11.9	12.0	12.2	12.4	12.6
1.0080	12.4	12.6	12.7	12.8	13.0	13.2	13.4	13.6	13.7	13.9
1.0090	13.7	13.9	14.0	14.1	14.4	14.5	14.7	14.9	15.0	15.3
1.0100	15.0	15.2	15.3	15.6	15.7	15.8	16.1	16.2	16.5	16.6
1.0110	16.3	16.5	16.7	16.9	17.0	17.3	17.4	17.5	17.8	17.9
1.0120	17.7	17.9	18.0	18.2	18.3	18.6	18.7	19.0	19.1	19.3
1.0130	19.1	19.2	19.3	19.5	19.7	19.9	20.0	20.3	20.4	20.6
1.0140	20.4	20.5	20.6	20.9	21.0	21.2	21.4	21.6	21.8	22.0
1.0150	21.7	21.8	22.0	22.2	22.3	22.5	22.7	22.9	23.1	23.3
1.0160	23.0	23.3	23.4	23.5	23.6	23.9	24.0	24.3	24.4	24.7
1.0170	24.3	24.6	24.7	24.8	25.1	25.2	25.3	25.6	25.7	26.0
1.0180	25.6	25.9	26.0	26.1	26.4	26.5	26.8	26.9	27.2	27.3
1.0190	27.0	27.2	27.3	27.6	27.7	27.8	28.1	28.2	28.5	28.6
1.0200	28.3	28.5	28.6	28.9	29.0	29.2	29.4	29.6	29.8	30.0
1.0210	29.6	29.8	30.0	30.2	30.3	30.6	30.7	30.9	31.1	31.3
1.0220	30.9	31.2	31.3	31.5	31.7	31.9	32.0	32.2	32.5	32.6
1.0230	32.2	32.5	32.6	32.8	33.0	33.2	33.4	33.5	33.8	33.9
1.0240	33.7	33.8	33.9	34.2	34.3	34.5	34.7	35.0	35.1	35.4
1.0250	35.0	35.1	35.2	35.5	35.6	35.9	36.0	36.3	36.4	36.7
1.0260	36.3	36.4	36.7	36.8	36.9	37.2	37.3	37.6	37.7	38.0
1.0270	37.6	37.8	38.0	38.1	38.4	38.5	38.8	38.9	39.1	39.3
1.0280	38.9	39.1	39.3	39.4	39.7	39.8	40.1	40.2	40.5	40.7
1.0290	40.2	40.5	40.6	40.8	41.0	41.2	41.4	41.6	41.8	
1.0300	41.6	41.8	41.9							
1.0310										

**Table 1. Salinity in parts per thousand (ppt)***Note: For use with 60°/60°F hydrometer.*

Observed Reading (Sp Gr)	Temperature of Water in Graduated Cylinder (°C)									
	28.5	29.0	29.5	30.0	30.5	31.5	31.5	32.0	32.5	33.0
0.9980	0.7	0.8	1.1	1.2	1.5	1.6	1.9	2.0	2.3	2.4
0.9990	2.0	2.3	2.4	2.5	2.8	2.9	3.2	3.4	3.6	3.8
1.000	3.4	3.6	3.7	4.0	4.1	4.4	4.5	4.8	4.9	5.1
1.0010	4.8	4.9	5.1	5.1	5.4	5.5	5.8	5.9	6.2	6.4
1.0020	6.1	6.3	6.4	6.6	6.8	7.0	7.2	7.5	7.6	7.9
1.0030	7.4	7.6	7.7	8.0	8.1	8.4	8.5	8.8	9.1	9.2
1.0040	8.8	8.9	9.2	9.3	9.6	9.7	10.0	10.1	10.4	10.5
1.0050	10.1	10.2	10.5	10.6	10.9	11.0	11.3	11.5	11.7	11.9
1.0060	11.4	11.7	11.8	12.0	12.2	12.4	12.6	12.8	13.1	13.2
1.0070	12.8	13.0	13.1	13.4	13.6	13.7	14.0	14.1	14.4	14.7
1.0080	14.1	14.3	14.5	14.7	14.9	15.2	15.3	15.6	15.7	16.0
1.0090	15.4	15.7	15.8	16.1	16.2	16.5	16.6	16.9	17.1	17.3
1.0100	16.7	17.0	17.1	17.4	17.5	17.8	18.0	18.2	18.4	18.7
1.0110	18.2	18.3	18.6	18.7	19.0	19.1	19.3	19.6	19.7	20.0
1.0120	19.5	19.6	19.9	20.1	20.3	20.5	20.6	20.9	21.2	21.3
1.0130	20.8	21.0	21.2	21.4	21.6	21.8	22.1	22.2	22.5	22.7
1.0140	22.2	22.3	22.6	22.7	23.0	23.1	23.4	23.6	23.8	24.0
1.0150	23.5	23.6	23.9	24.0	24.3	24.6	24.7	24.9	25.2	25.3
1.0160	24.8	25.1	25.2	25.5	25.6	25.9	26.1	26.3	26.5	26.8
1.0170	26.1	26.4	26.5	26.8	27.0	27.2	27.4	27.7	27.8	28.1
1.0180	27.6	27.7	27.9	28.1	28.3	28.5	28.7	29.0	29.2	29.4
1.0190	28.9	29.0	29.2	29.5	29.6	29.9	30.0	30.3	30.6	30.8
1.0200	30.2	30.4	30.6	30.8	30.9	31.20	31.5	31.6	31.9	32.1
1.0210	31.5	31.7	32.0	32.1	32.4	32.5	32.8	33.0	33.3	33.4
1.0220	32.9	33.0	33.3	33.4	33.7	33.9	34.1	34.3	34.6	34.8
1.0230	34.2	34.5	34.6	34.8	35.0	35.2	35.5	35.6	35.9	36.2
1.0240	35.5	35.8	35.9	36.2	36.4	36.5	36.8	37.1	37.2	37.5
1.0250	36.8	37.1	37.2	37.5	37.7	37.8	38.1	38.4	38.6	38.8
1.0260	38.2	38.4	38.6	38.8	39.0	39.3	39.4	39.7	39.9	40.2
1.0270	39.5	39.8	39.9	40.2	40.3	40.6	40.8	41.0	41.2	41.5
1.0280	40.8	41.1	41.2	41.5						





**LaMOTTE COMPANY**

Helping People Solve Analytical Challenges<sup>SM</sup>

PO Box 329 • Chestertown • Maryland • 21620 • USA  
800-344-3100 • 410-778-3100 (Outside U.S.A.) • Fax 410-778-6394  
Visit us on the web at [www.lamotte.com](http://www.lamotte.com)

4.10 • 63-0011