

WARNING! This set contains chemicals that may be harmful if misused. Read cautions on individual containers carefully. Not to be used by children except under adult supervision



The Biguanide and pH pool/spa test kit provides very reliable results in just seconds. LaMotte Company has specialized in water analysis since 1919 and offers a complete line of test kits and Insta-Test® strips for the pool and spa owner's needs.

FREE BONUS! Visit our website at www.lamotte.com/insta to download the Insta-Test® handbook or see more products.


GOT QUESTIONS? Go to www.lamotte.com/insta and find answers to your pool and spa water chemistry questions.

Important Tips

- Take water samples from a depth of about 16" below the water surface. Never test immediately after adding pool/spa chemicals.
- When adding drops of liquid reagents, always hold the bottle in an upright position to ensure a uniform drop size.
- Read your test results with adequate background light, but away from direct sunlight. To read, hold DipCell color comparator at arms length above the horizon.
- Rinse the DipCell color comparator **thoroughly** after testing.
- Store kit in a cool dry place away from sunlight.
- For best results, replace all test kit reagents annually.

Biguanide and pH Test Instructions

1. Dip the DipCell color comparator(3377) into the pool or spa and fill to the line with sample water (shake out any excess).

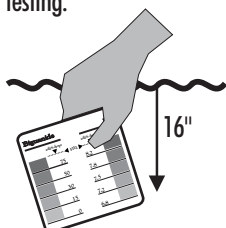

2. Add 6 drops of Biguanide Test Solution (3919) to the chamber next to the Biguanide colors.



Add 6 drops

Biguanide	pH
75	8.2
50	7.8
30	7.5
15	7.2
0	6.8


3. Add 6 drops of pH Test Solution (2023) to the chamber next to the pH colors.



Add 6 drops

Biguanide	pH
75	8.2
50	7.8
30	7.5
15	7.2
0	6.8

4. Cap and invert to mix. Match sample colors to the color standards and record results. (Rinse promptly after use)

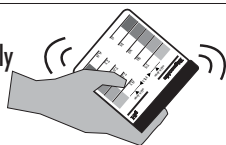

Insta- TEST[®]

**Biguanide
& pH
DipCell Kit**

50 TESTS
each factor



LaMotte